

Oven

Instructions for use

Thank you for purchasing this quality product
Please read these instructions carefully before use


14701 (1,2kW)

1400x (1.9kW)

1405x (2,8kW)

14071 (2,7kW)

1290x (3,0kW)

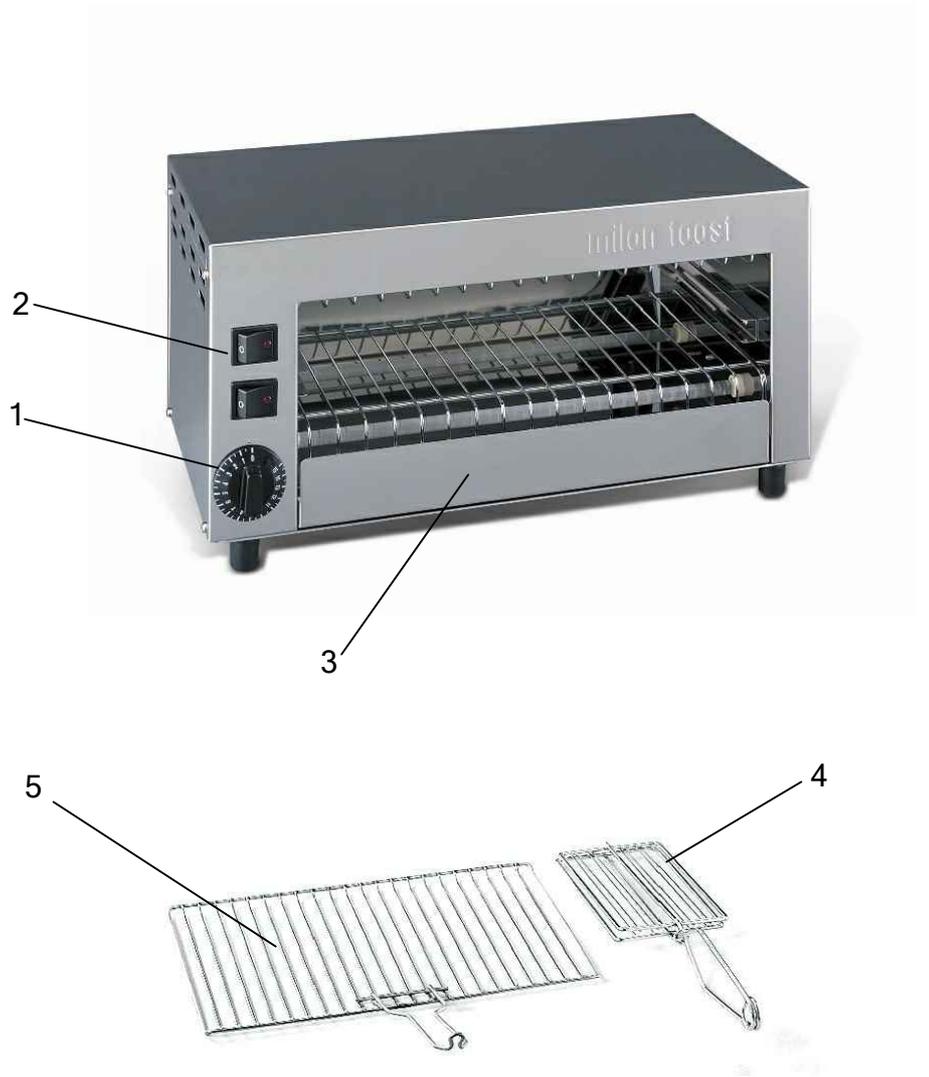

- 1 timer
- 2 lighting switch for heating elements selection *
- 3 crumb collector
- 4 plier **
- 5 grill *

* = except 1470x

PRELIMINARY RECOMMENDATIONS :

Unpack the appliance carefully. Keep and use the original packing in case you return the product to the retailer. Remove plastic, cardboard all protections, pliers ** and other accessories. Remove the adhesive plastic film protecting the stainless steel parts before switching the appliance on. In case the unit looks damaged contact the retailer before use. Children should be kept away from packing material, as it may be very dangerous for them to play with it.

SAFETY STANDARDS :

Oven is not designed for built-in use.

Check that the supply voltage of the grid corresponds to the one marked on the rating plate put under the appliance, which must be earthed and whose circuit must be in compliance with the relevant safety standards. In case the power socket and the plug of the appliance do not correspond, let the socket be removed and changed by an authorized person only. In case you dispose the appliance near walls and partition walls, kitchen furniture, decorative elements, etc., these should be made of antifire material in compliance with the fire prevention standards. Take care to keep a minimum distance of 10 cm. from lateral elements, 25 cm. from the rear of the appliance, the upper part should be far from the ceiling. In the event of damage, the power cord should be removed and replaced by an original one.

USING YOUR BREAD & SANDWICH TOASTER:

This Oven is ideal to cook toast, bread, pizza, bruschetta by radiant heat. It should be used only by authorized personnel.

Any other use of the appliance is improper and dangerous. Use original parts and accessories only. Do not leave the working appliance unattended. Keep children and unauthorized people away from the appliance. Do not use outdoors and do not expose to damp. Do not soak or sprinkle it in water or any other liquid. Avoid cleaning the appliance with liquids, as it is not waterproof. Do not cover the appliance: otherwise, risk of fire! Disconnect the plug when the appliance is switched off. Disconnect the plug before moving the appliance. Do not tear the power cord or the appliance to disconnect plug from the power socket. Avoid any contact between the power cord and the appliance.

During ordinary use the external structure of the appliance is very hot. To work use heat resistant gloves.

Touch the appliance only in the points 1 and 2: otherwise, risk of burn! Cool the appliance off before moving it.

Warnig: temperature on external structure and crumb collector is high. Always handle with heat resistant gloves.



FIRST USE OR REUSE OF THE APPLIANCE AFTER A LONG PERIOD OF IDLENESS

1. Use the appliance in airy spots.
2. Remove the pliers from the oven.
3. Connect the power plug with the socket.
4. Rotate the timer clockwise.
5. Select the lighting switches.
6. The pilot lights and the lighting switches remain turned on for about 15 minutes.
7. Repeat the above-mentioned operations from 4 to 6 few minutes later.

HOW TO USE YOUR OVEN :

Warning: The thickness of bread or sandwiches to be put in the pliers should not exceed 6 cm (2,5 in.).

This appliance operates automatically thanks to its timer and the upper, middle (only for Oven 1405X) and lower heating elements are selected by the lighting switches.

On model 1407X upper and lower elements work contemporaneously.

Introduce the stuffed bread slices into the relevant adjustable-wall pliers (Fig. 1-4). Then the lateral walls spread by lightly pressing the pliers' handles. Now you can put the sandwich in the pliers, decreasing the pressure on the handles and introducing the pliers into the heating chamber. Instead of the pliers, you may use the grill (Fig. 1-5) provided with a hidden sleeve.

Rotate the timer clockwise till the desired heating time and select heating elements.

Otherwise, turn left on MAN position for continuous running. Then select the heating elements or make a slight rotation counterclockwise to fix the switching and exclude timer function. The switching of the lighting switch/ lamp indicates that the appliance is working.

RECOMMENDATIONS FOR USE:

The right time to reach the right bread and food cooking point depends on several factors: quality, freshness, thickness, shape, food and stuffed food temperature.

The right cooking point can be reached after several tests, also considering that:

- when the appliance is cold, cooking time should be increased;
- food cooked in this appliance can be very hot - handle with care.

CLEANING :

Disconnect the power plug before cleaning the appliance. Cool the appliance off before cleaning or moving it. Clean the appliances externally with a damp cloth or special products for stainless steel (Fig. 1 a). Take the crumb collector periodically out (Fig. 1-3) and clean it with a damp cloth. The pliers and the grill should be cleaned periodically. Do not use any tool to clean the heating elements.

MAINTENANCE :

No parts can be repaired by the user.

Your retailer will be able to provide all suitable tooling and equipment to repair this appliance, together with the original spare parts.

DESTRUCTION OR ALIENATION OF THE PRODUCT :

In case the product, working or not, has to be replaced and thus abandoned or scrapped, take care it is made unusable and harmless.

**** NOTE:** Pliers are available only for specific models and markets

GUARANTEE:

- 1 This product is guaranteed against manufacturing defects for a period of one year from the date of purchase - parts and labour free of charge. As the purchaser and the retailer agreed on this guarantee, this product is carriage forward. The retailer has the exclusive rights of ownership for any replaced part.
- 2 This guarantee is valid in all UE Member Countries.
- 3 This guarantee does not cover repairs undertaken for: a) breakage due to crashing or falling of the product; b) connections to a higher current or voltage than it is indicated; c) normal wear and tear of the product; d) damage of parts due to negligence and/or misuse of the product.
- 4 Within the guarantee period, the retailer is not responsible for material damages or accidents due to any installation not in accordance with the safety standards of the country where the product is used, and in particular to: a) damaged plugs, lack of earth connection, etc; b) misuse of the appliance by the purchaser.

DECLARATION OF THE PRODUCER

In consideration of the positive results of the tests carried out, EGI MILAN TOAST declares on its own responsibility that its Oven **MILANTOAST** ®, identification code 1290x, 1400x, 1405x, 1407x, 14701 are in accordance with the following Directives:

73/23/CEE, 93/68/CE, 2006/95/CE (LVD), 2004/108/CE (EMC), 2004/40/CE (EMF)
1935/2004 (FOOD CONTACT), DM 21/03/1973 (FOOD CONTACT)



They also comply to European Directives:

2011/65/CE (RoHS), 2002/96/CE (WEEE)




Sole UK Importer / Distributor:

MAESTROWAVE

R.H.Hall (Microwave) Ltd - Halco House, Beacon Court, Pitstone Green Business Park
Pitstone, nr Tring - Leighton Buzzard Bedfordshire LU7 9GY
Tel 01296 663400 service fax line: 01296 663403 info@rhhall.com

Sulbiate 18 gennaio 2013

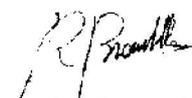
Riccardo Brambilla

EGI MILANTOAST ®
via delle Industrie, 26 20884 Sulbiate (MB) ITALY
tel +39.039.68.83.332 fax +39.039.60.22.896
www.milantoast.com info@milantoast.com