


Pizza oven


Instructions for use

Thank you for purchasing this quality product
Please read these instructions carefully before use

15050 (1,7 kW) , 15060 (3,4kW) , 15070 (3,4kW)

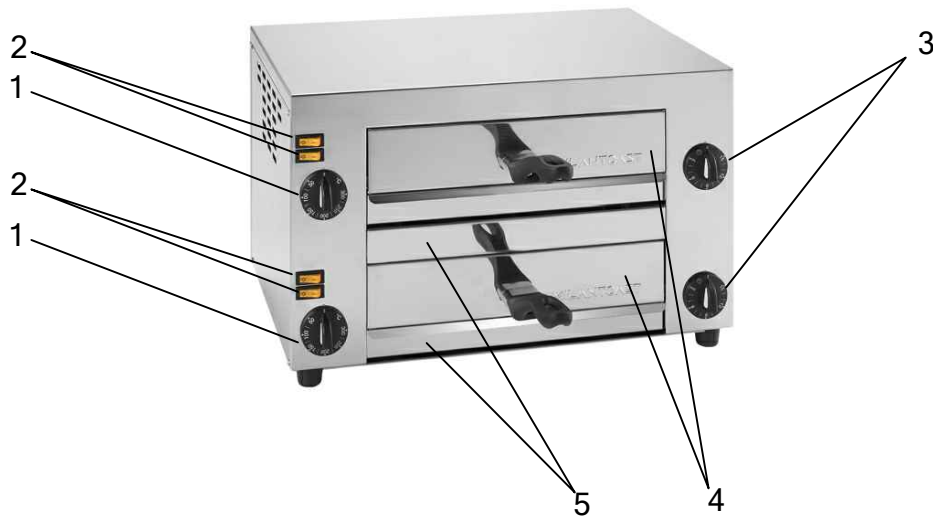

15069 (3,4 kW)

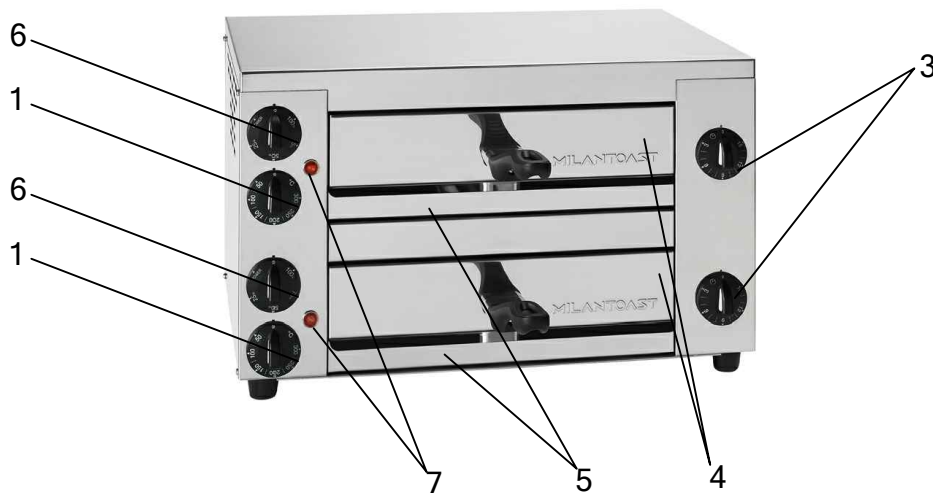

- 1 thermostat
- 2 switch with orange lamp
- 3 alarm timer
- 4 grill
- 5 tray
- 6 energy regulator
- 7 lamp

PRELIMINARY RECOMMENDATIONS :

Unpack the appliance carefully. Keep and use the original packing in case you return the product to the retailer. Remove plastic, cardboard all protections, pliers and other accessories. Remove the adhesive plastic film protecting the stainless steel parts before switching the appliance on. In case the unit looks damaged contact the retailer before use. Children should be kept away from packing material, as it may be very dangerous for them to play with it.

SAFETY STANDARDS :

Oven is not designed for built-in use: do not place it in closet or closed compartment.

Check that the supply voltage of the grid corresponds to the one marked on the rating plate under the appliance, which must be earthed and whose circuit in compliance with the relevant safety standards. In case you dispose the appliance near walls and partition walls, kitchen furniture, decorative elements, etc., these should be made of antifire materials in compliance with the fire prevention standards.

Take care to keep a minimum distance of 10 cm. from the surrounding elements. Leave the top part free (not near to ceiling). In the event of damage, the power cord should be removed and replaced by an original one. In case the power socket and the plug of the appliance do not correspond, let the socket be removed and changed by an authorized person only.

IRELAND AND UNITED KINGDOM

WARNING - THIS APPLIANCE MUST BE EARTHED

IMPORTANT : The wires in this mains lead are coloured in accordance with the following code : -green-yellow =earth blue=neutral brown=live

IMPORTANT : as the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

-the wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol, or coloured green or green and yellow;

-the wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black;

-the wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red;

IRELAND :IMPORTANT : For appliances fitted with a power supply cord and having a rated input exceeding 2.8 kW any plug fitted shall

have a rated current of 15 A or more.

UNITED KINGDOM :IMPORTANT : For appliances fitted with a power supply cord and having a rated input exceeding 3.0 kW the appliance must be

connected to a socket-outlet having a rated current exceeding 13A and that a 13A BS 1363 plug is therefore not suitable.

USING YOUR OVEN :

In all pizza oven models both grills (cooking chambers) are completely independent. Temperature for each single grid can be adjusted autonomously by thermostats. In the right part of the appliance there is an adjustable acoustic device. On model 15050 the heating elements (and warming action) are on bottom grid only. Switches (2), one for each grid, switch on or off the element. They light when the element is working. On model 15060, top and bottom grid heating elements are available. By its 2 switches (2) 3 different mode of use are available: only top heating, only bottom, both top and bottom. On model 15069 top and/or bottom heating are possible. Furthermore the power regulators allows to set the upper quantity of heating from 0% to 100%. This way cooking results are perfect for every kind of pizza, even thick and with rich toppings.

All pizza ovens are designed to frozen/ fresh pizza by radiant heat. Authorized personell only should use the appliance. Any other use of the appliance is improper and dangerous.

Use original parts and accessories only. Do not leave the working appliance unattended. Keep children and unauthorized people away from the appliance. Do not use it outdoors and do not expose to damp.

Do not soak or sprinkle it in water or any other liquid. Avoid cleaning the appliance with liquids, as it is not waterproof. Do not cover the appliance: otherwise, risk of fire! Disconnect the plug when the appliance is switched off. Disconnect the plug before moving the appliance.

Do not tear the power cord or the appliance by disconnecting the plug from the power socket. Avoid any contact between the power cord and the appliance. During ordinary use the external structure of the appliance is very hot: handle the appliance and its accessories only with heat resistant gloves: otherwise, risk of burn! Cool the appliance off before moving it.



FIRST USE OR REUSE OF THE APPLIANCE AFTER A LONG PERIOD OF IDLENESS :

1. Use the appliance in airy spots.
2. Remove various protections and accessories from the oven.
3. Connect the power plug with the socket.
4. Rotate the thermostates clockwise on 250°C.
5. Let heat for about 20 min.

HOW TO USE YOUR PIZZA OVEN

MODEL	15050	15060	15069	15070
MAX PIZZA THICKNESS	5,5 cm	4 cm	5,5 cm	5,5 cm

This appliance functions automatically thanks to its thermostat
Set oven temperature by thermostat. Select switches and power regulators
Use provided plastic handle a to input a frozen pizza into heating chamber.
Set a time by rotating the alarm timer clockwise until it stops. Then rotate it back to the chosen time.
Wait end of heating
An acoustic signal advise time set passed, but doesn't switch off heating elements. Extract pizza with handles.
Pizza heated in this oven can be very hot - handle with care.

RECOMMENDATIONS FOR USE :

The right time to reach the right cooking point depends on several factors: quality, freshness, thickness, shape, food and stuffed food temperature and pizza oven temperature.
The right cooking point (temperature & time) can be reached after several tests .
New users should check heating status every 2/3 minutes for the first times they use the oven. Generally the oven allows to halt cooking time by increasing 20-30°C the recommended temperature on food instruction.
Minimum storage temperature : 0°C

CLEANING :

Disconnect the power plug before cleaning the appliance. Cool the appliance off before cleaning or moving it. Clean the appliances externally with a damp cloth or special products for stainless steel . Take the crumb collector periodically out (5) and clean it with a damp cloth.
The grill should be cleaned periodically. Do not use any tool to clean the heating elements.

MAINTENANCE :

No parts can be repaired by the user. Your retailer will be able to provide all suitable tooling and equipment to repair this appliance, together with the original spare parts.

DESTRUCTION OR ALIENATION OF THE PRODUCT:

In case the product, working or not, has to be replaced and thus abandoned or scrapped, take care it is made unusable and harmless.

GUARANTEE:

- 1 This product is guaranteed against manufacturing defects for a period of one year from the date of purchase - parts and labour free of charge. As the purchaser and the retailer agreed on this guarantee, this product is carriage forward. The retailer has the exclusive rights of ownership for any replaced part.
- 2 This guarantee is valid in all UE Member Countries.
- 3 This guarantee does not cover repairs undertaken for: a) breakage due to crashing or falling of the product; b) connections to a higher current or voltage than it is indicated; c) normal wear and tear of the product; d) damage of parts due to negligence and/or misuse of the product.
- 4 Within the guarantee period, the retailer is not responsible for material damages or accidents due to any installation not in accordance with the safety standards of the country where the product is used, and in particular to: a) damaged plugs, lack of earth connection, etc; b) misuse of the appliance by the purchaser.

DECLARATION OF THE PRODUCER

In consideration of the positive results of the tests carried out, EGI MILAN TOAST declares on its own responsibility that its Pizza Oven **MILANTOAST** ®, identification code 15050, 15060, 15069, 15070 are in accordance with the following Directives:

73/23/CEE, 93/68/CE, 2006/95/CE (LVD), 2004/108/CE (EMC), 2004/40/CE (EMF)
1935/2004 (FOOD CONTACT), DM 21/03/1973 (FOOD CONTACT)

They also comply to European Directives:

2011/65/CE (RoHS), 2002/96/CE (WEEE)



Sole UK Importer / Distributor:

MAESTROWAVE

R.H.Hall (Microwave) Ltd - Hallico House, Beacon Court, Pitstone Green Business Park
Pitstone, nr Tring - Leighton Buzzard Bedfordshire LU7 9GY
Tel 01296 663400 service fax line: 01296 663403 info@rhhall.com

Sulbiate 18 gennaio 2013


Riccardo Brambilla

EGI MILANTOAST ®
via delle Industrie, 26 20884 Sulbiate (MB) ITALY
tel +39.039.68.83.332 fax +39.039.60.22.896
www.milantoast.com info@milantoast.com